

Import & export BVRD microphone configuration

Product Range:	VIGIL2
Product Code (if applicable):	BVRD8 / BVRD16 / BVRD24 / BVRD32 / BVRD40 / BVRD48 / BVRD56 / BVRD64
Description of activity:	Import and/or export of BVRD microphone configuration files
Description of likely fault(s):	Not related to a fault condition

IMPORTANT - this product forms part of a life-safety system

Please Note: Periodic inspection and servicing needs to be carried out by a competent person with specialist knowledge of VASs, relevant current training and experience, and with adequate access to spares and sufficient information regarding the system. (BS5839-8).

This sheet assumes that the software and drivers have been installed to the engineer's PC and that the microphone has been connected to the rack.

1. With the microphone facing you, remove the right-hand front screw on the side panel and loosen the rear right-hand screw. The side panel will now move to expose the side connections.
2. With the PC powered up. Plug the USB lead into the PC and then into the connection on the side of the microphone.
3. Start the BVRD Configuration Software. If the drivers are loaded it will detect the microphone and ask 'do you want to download the configuration'. Press 'YES'
4. Once the config is downloaded it should ask you 'Do you want to save' select 'YES'. Name the file and press enter.
5. Config Software will ask for password default is: - letmein
6. Make any changes that you require.
7. To Upload the new configuration. At the top of the screen you will see a tab with USB and TOOLS. Select this and below this tab options will appear for uploading and downloading the configuration.
8. Select upload settings
9. It will ask 'do you want to upload Configuration' select 'YES'
10. Once uploaded you can disconnect the USB lead and refit the side panel.
11. Finally, you can test the microphone for correct operation.

Author:	Paul Judd	Doc Reference:	5.0015
Approved by:	Tom Holder	Edited by:	N/A
Release Date:	30/11/17	Updated:	17/02/22

For further help:

Manuals & Guides: Technical manuals, installation guides and more are available for download on our website: baldwinboxall.co.uk/downloads.

Telephone: Technical help line (0)1892 664422 (then press 3 for after sales technical help).

Training: We hold a range of courses. To find out more, or place a booking, please call us or visit our website: baldwinboxall.co.uk/training.



BALDWIN BOXALL
LEADING THE WAY TO SAFETY

Baldwin Boxall Communications Ltd
Wealden Industrial Estate, Farningham Road,
Crowborough, East Sussex, TN6 2JR, United Kingdom

T: +44 (0) 1892 664422
E: mail@baldwinboxall.co.uk
W: www.baldwinboxall.co.uk