

Rename zones on a Baldwin Boxall BVRDTSM microphone


Product Range:	VIGIL2
Product Code (if applicable):	BVRDTSM
Description of activity:	How to rename zones on a BVRDTSM Microphone
Description of likely fault(s):	No fault

IMPORTANT - this product forms part of a life-safety system

Please Note: Periodic inspection and servicing needs to be carried out by a competent person with specialist knowledge of VASs, relevant current training and experience, and with adequate access to spares and sufficient information regarding the system. (BS5839-8).

DESCRIPTION:

1. Turn the key clockwise to access emergency mode
2. Press and hold the Fault Accept/Lamp Test button for 10 seconds to enter configuration mode
3. Select 'Restart'

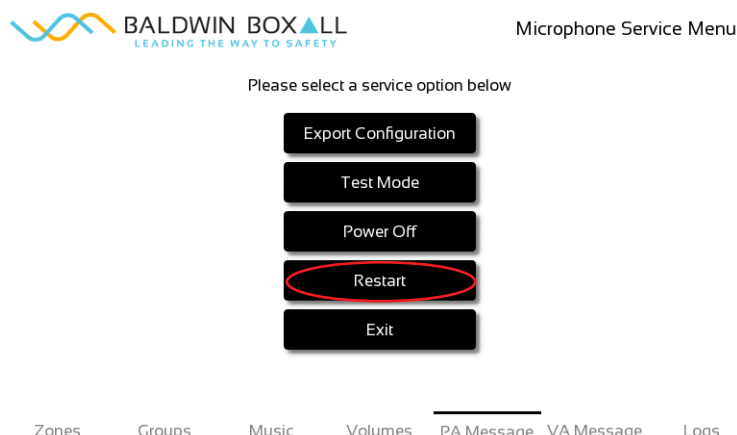

4. Enter the PIN code 5555



Author:	Oliver Smith	Doc Reference:	5.0018
Approved by:	Tom Holder	Edited by:	Robbie Trent
Release Date:	30/11/17	Updated:	26/11/21

5. Access User interface

BALDWIN BOXALL

LEADING THE WAY TO SAFETY

Microphone Configuration

User Accounts

Installation

Communication

Audio Inputs

User Interface

Monitoring

Display

Default Names

VA Active

Time/Date

Firmware

Import/Export

Back

Please read the supplied manual before attempting to change any of the configuration settings. Failure to do so may limit the functionality of the microphone.

Save/Reboot

Exit

Bvrdtsm: v1.24

AuxCpu: v1.00

6. Scroll for required zone button

BALDWIN BOXALL

LEADING THE WAY TO SAFETY

Microphone Configuration

Zones

Groups

Messages

Music

Vols

Dva

Paging

Logs

Feature Enabled:

Quantity:

Zone Button:

Button Name:

Line 1

Line 2

Button Number:

Home Page:

None

Access Level:

1

Yes

10

1

Zone 1

10

None

1

Save/Reboot

Exit

Back

Please read the supplied manual before attempting to change any of the configuration settings. Failure to do so may limit the functionality of the microphone.

Bvrdtsm: v1.24

AuxCpu: v1.00

7. Click on name to open up the keypad

BALDWIN BOXALL

LEADING THE WAY TO SAFETY

Microphone Configuration

Zones

Groups

Messages

Music

Vols

Dva

Paging

Logs

Feature Enabled:

Quantity:

Zone Button:

Button Name:

Line 1

Line 2

Button Number:

Home Page:

None

Access Level:

1

Yes

10

1

Zone 1

10

None

1

Save/Reboot

Exit

Back

Please read the supplied manual before attempting to change any of the configuration settings. Failure to do so may limit the functionality of the microphone.

Bvrdtsm: v1.24

AuxCpu: v1.00

8. Type in new zone name, press done when complete for this zone

BALDWIN BOXALL

LEADING THE WAY TO SAFETY

Zone Button: 1 - Line 1 Text:

Zone 005

(Maximum 20 Characters)

1

2

3

4

5

6

7

8

9

0

<X>

-

/

:

;

(

)

£

¢

@

Done

Caps Lock

-

\

.

'

?

!

"

+

=

↑

ABC

<-

->

Copy

Paste

Undo

9. Cycle through all button/zone names until complete

BALDWIN BOXALL

LEADING THE WAY TO SAFETY

Microphone Configuration

Zones

Groups

Messages

Music

Vols

Dva

Paging

Logs

Feature Enabled:

Quantity:

Zone Button:

Button Name:

Line 1

Line 2

Button Number:

Home Page:

None

Access Level:

1

Yes

10

1

Zone 1

10

None

1

Save/Reboot

Exit

Back

Please read the supplied manual before attempting to change any of the configuration settings. Failure to do so may limit the functionality of the microphone.

Bvrdtsm: v1.24

AuxCpu: v1.00

10. Once complete, press the save/reboot button

BALDWIN BOXALL
LEADING THE WAY TO SAFETY

Microphone Configuration

Zones Groups Messages Music Vols Dva Paging Logs

Bvrdtsm: v1.24
AuxCpu: v1.00

Feature Enabled: Yes

Quantity: 10

Zone Button: 1

Button Name: Line 1: Zone 1
Line 2:

Button Number: 10

Home Page: None Access Level: 1

Save/Reboot

Back

Please read the supplied manual before attempting to change any of the configuration settings. Failure to do so may limit the functionality of the microphone.

Exit

11. IMPORTANT - Turn the key to the upright position before proceeding further

12. Confirm microphone reboot

Save Configuration Settings

Warning

Changes made to the configuration will now be saved and the microphone rebooted.

Are you sure?

Yes No

13. On reboot the fault lights will become illuminated

14. To clear the fault, turn the key clockwise

15. Press and hold the Fault Accept/Lamp Test button for 2 seconds and release

16. Return the key to the upright position

For further help:

Manuals & Guides: technical manuals, installation guides and more are available for download on our website: baldwinboxall.co.uk/downloads.

Telephone: technical help line (0)1892 664422 (then press 3 for after sales technical help).

Training: we hold a range of courses. To find out more, or place a booking, please call us or visit our website: baldwinboxall.co.uk/training.



BALDWIN BOXALL
LEADING THE WAY TO SAFETY

Baldwin Boxall Communications Ltd
Wealden Industrial Estate, Farningham Road,
Crowborough, East Sussex, TN6 2JR, United Kingdom
T: +44 (0) 1892 664422
E: hello@baldwinboxall.co.uk
W: www.baldwinboxall.co.uk