

## Set up a BVOCRIF repeater unit on OmniCare

<b>Product Range:</b>	OmniCare
<b>Product Code (if applicable):</b>	BVOCRIF / DTAKIT / DTASKIT
<b>Description of activity:</b>	How to set up a BVOCRIF for connection of a toilet alarm kit to an OmniCare system.
<b>Description of likely fault(s):</b>	Not related to a fault condition

Please Note: "Inspection and servicing needs to be carried out by a competent person with specialist knowledge of the equipment used. This will normally be an outside organization; care needs to be taken to ensure that, if, for example, in-house employees are used for this task, they have equivalent competence to the technicians of a typical servicing organisation." (BS5839-9).

### A BVOCRIF is required when:

- Cable runs need to exceed 200m between units on the loop. (See Repeater Set Up)
- A BVOCRIF is required when connecting a disabled toilet alarm kit to the OmniCare system. (See DTAKIT Set Up.)

### Repeater Set Up:

1. Find a suitable location on the loop to 'break in to'.
2. Either side will connect into the A & B terminals as it does for existing remotes on the loop
3. It is **important** to set **Switch 10 to OFF** so the system does not see the BVOCRIF as an additional unit on the loop when commissioning.

### DTAKIT Set Up:

1. It is normal to install the BVOCRIF near the location of the disabled toilet alarm. Either side will connect into the A & B terminals as it does for existing remotes on the loop.
2. It is **important** to set **Switch 10 to ON** so the system will look for up to two DTAKITs when commissioning.
3. If the BVOCRIF is to connect to one DTA KIT then set **Switch 9 to ON** to monitor a single unit.
4. If the BVOCRIF is to connect to two DTA KITs then set **Switch 9 to OFF** to monitor two units.
5. For 'Unit Address':
  - If you need the position of the DTAKIT to be as 'wired position' set **Switch 8 to OFF**.
  - If you need all of the DTAKITs on the system to be grouped together (i.e. as one address) after commissioning set **Switch 8 to ON**.
6. DTAKITs need to be connected to the A and B terminals in the BVOCRIF and then wired to the Overdoor Light unit in the toilet alarm kit.

Note: All connections to the OmniCare loop should be made with the loop power off.

<b>Author:</b>	Oliver Smith	<b>Doc Reference:</b>	5.0021
<b>Approved by:</b>	Tom Holder	<b>Edited by:</b>	N/A
<b>Release Date:</b>	27/04/17	<b>Updated:</b>	17/02/22

**For further help:**

**Manuals & Guides:** Technical manuals, installation guides and more are available for download on our website: [baldwinboxall.co.uk/downloads](http://baldwinboxall.co.uk/downloads).

**Telephone:** Technical help line (0)1892 664422 (then press 2 for after sales technical help).

**Training:** We hold a range of courses. To find out more, or place a booking, please call us or visit our website: [baldwinboxall.co.uk/training](http://baldwinboxall.co.uk/training).



**BALDWIN BOXALL**  
LEADING THE WAY TO SAFETY

Baldwin Boxall Communications Ltd  
Wealden Industrial Estate, Farningham Road,  
Crowborough, East Sussex, TN6 2JR, United Kingdom  
T: +44 (0) 1892 664422  
E: [hello@baldwinboxall.co.uk](mailto:hello@baldwinboxall.co.uk)  
W: [www.baldwinboxall.co.uk](http://www.baldwinboxall.co.uk)