

BBTB Date:	26 Jan 2017
BBTB Number:	BBTB-002
BBTB Title:	BVSMP External Temp Sensor
System Description:	Vigil 2 Voice Alarm
Product(s) Affected:	BVSMP & BVSMP LT
Reference:	ECR3122
Priority:	2

- 1 - Essential:** Action is Recommended
 - 2 - Important:** Product Form / Fit / Function has been changed (may affect compatibility)
 - 3 - General:** For information / reference
 - 4 - Obsolescence:** Notification of Component or Product Obsolescence
-

DESCRIPTION

Release of new version of BVSMP & BVSMP LT.

FEATURE CHANGES

Addition of external temperature sensor to improve battery charging performance.

DEFECTS FIXED

None.

COMPATIBILITY

If installed in Legacy systems an additional temperature sensor (included with BVSMP/LT) will need to be installed and potentially Impedance DIL switch settings changed.

There are 4 major revisions of BVSMP all of which are backwards compatible.




Note:


The External Temperature Sensor must be connected. If the External Sensor is not connected the Charger will be disabled and the BVSMP will display a fault.

If replacing a previous version of BVSMP please refer to the following table:

MK1 BVSMP (No DIL SW)	MK2 BVSMP (with Impedance DIL SW)	MK3 BVSMP (with DIL SW and External Sensor & White Crimp connector)	MK4 BVSMP (as MK3 but with blue screw connector)
If replacing the BVSMP in the shaded cell, follow the instructions that correspond with the replacement version			
Original "Legacy" Version	Set DIL SW to "ON"	Set DIL SW to "ON", fit Sensor to Battery Lead and plug into BVSMP/LT rear	Set DIL SW to "ON", fit Sensor to Battery Lead and connect Thermistor to blue block
n/a	Default State - Set DIL SW to "OFF"	Set DIL SW to "OFF", fit Sensor to Battery Lead and plug into BVSMP/LT rear	Set DIL SW to "OFF", fit Sensor to Battery Lead and connect Thermistor to blue block
n/a	n/a	Default State - DIL SW "OFF", Sensor connected	Set DIL SW to "OFF", cut off white connector, strip back insulation & connect to screw connector

Figure 1 — Illustration showing typical location for External Temperature Sensor (UPI064)

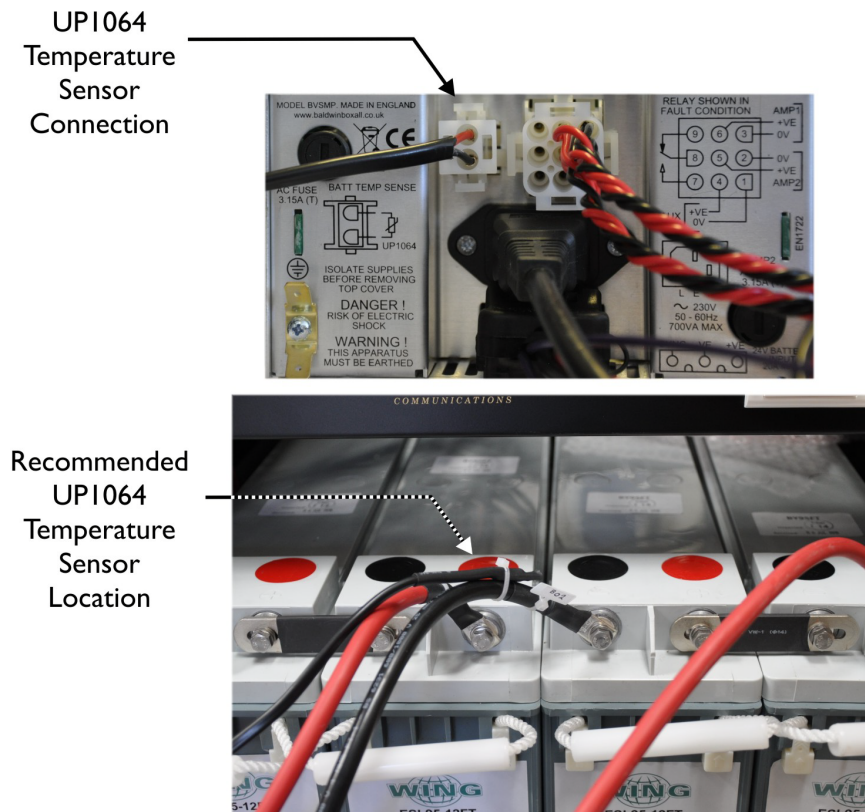


Note:
 Polarity of external temperature sensor not important. Temperature sensor should be affixed to battery negative connection close to the batteries.

Please refer to the "BVSMP LT Installation Manual" that can be found at www.baldwinboxall.co.uk for full installation details.

Information not to be copied or disclosed without written permission
 Copyright Baldwin Boxall Communications Limited
 COMMERCIAL IN CONFIDENCE

Customer Services Contact Details

For further assistance with any aspect of this Technical Bulletin please contact:

Baldwin Boxall Communications Ltd

Robbie Trent (Service Manager)

Email: robbie@baldwinboxall.co.uk

Ashley Wright (Customer Support Engineer)

Email: ashley@baldwinboxall.co.uk

Steve Bladon (Operations Manager)

Email: steveb@baldwinboxall.co.uk

Telephone: +44 (0) 1892 664422

Facsimile: +44 (0) 1892 663146