



Record a Message on a BVRDTSM Microphone

Product Range:	VIGIL2
Product Code (if applicable):	BVRDTSM
Description of activity:	How to record a message on a BVRDTSM Microphone
Description of likely fault(s):	No fault


IMPORTANT - this product forms part of a life safety system

Please Note: Periodic inspection and servicing needs to be carried out by a competent person with specialist knowledge of VASs, relevant current training and experience, and with adequate access to spares and sufficient information regarding the system. (BS5839-8).

1. Make sure you have logged in to the microphone using the PIN or NFC card.



2. Select 'PA Messages'

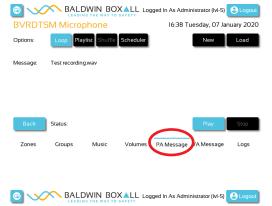

3. Select 'New'



Author:	Oliver Smith	Doc Reference:	5.0017
Approved by:	Tom Holder	Edited by:	N/A
Release Date:	30/11/17	Updated:	03/12/21


4. Name the recording by clicking into the recording field.




5. Type desired message name and press 'Done' when complete



6. When ready to record the message, select 'Record'.

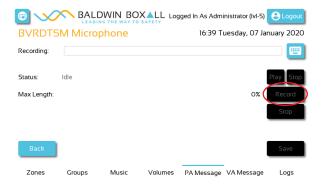

- 7. Use good microphone technique while recording and avoid unwanted background noise
- 8. Press 'Stop' to end the recording

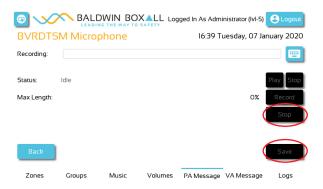

- 9. Press 'Save' to store the recording to the microphone's internal memory
- 10. To confirm the recording has stored successfully, press the 'Back' button

11. Click on 'Load'



12. Use the scroll buttons to find the recorded message




13. The message is now available and can be selected for immediate or scheduled broadcast

For further help:

Manuals & Guides: technical manuals, installation guides and more are available for download on our website: baldwinboxall.co.uk/downloads.

Telephone: technical help line (0)1892 664422 (then press 3 for after sales technical help).

Training: we hold a range of courses. To find out more, or place a booking, please call us or visit our website: baldwinboxall.co.uk/training.

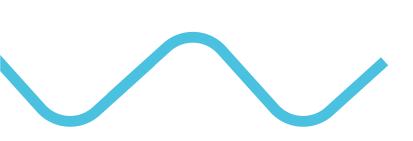



Baldwin Boxall Communications Ltd

Wealden Industrial Estate, Farningham Road, Crowborough, East Sussex, TN6 2JR, United Kingdom T: +44 (0) 1892 664422 E: hello@baldwinboxall.co.uk W: www.baldwinboxall.co.uk